

Midi / EvoSIGNAL

Midi TwinLIGHT Combi 115-230VAC YE

| | |
|-----------|----------------|
| Part No.: | 461.310.60 |
| Series: | EvoSIGNAL Midi |

**MECHANICAL DATA**

| | |
|------------------------------|-----------------------------|
| Height | 130 mm |
| Diameter | 85 mm |
| Materials | PC PC/ABS |
| Dome colour | Yellow |
| Housing colour | Grey |
| Protection category | IP66 |
| Connection | Push-in terminal |
| cross-sectional area minimum | 0,25mm ² / 24AWG |
| cross-sectional area maximum | 1,50mm ² / 16AWG |
| Service life optical | 50,000 h minimum |
| Acoustic service life | 5,000 h minimum |
| Working temperature minimum | -30°C |
| Working temperature maximum | +60°C |
| UL Type Rating | Type 12 |
| Weight with packaging | 286 g |
| Product weight | 186 g |

ELECTRICAL DATA

| | |
|-----------------------------|------------------------------|
| Operating voltage | 115-230V |
| Operating voltage type | AC |
| Operating voltage type | 50Hz at 230V 60Hz at 115V |
| Operating voltage tolerance | +/- 10% |
| Rated operational voltage | 230 VAC |
| Rated operational current | 150 mA |
| Rated inrush current | 7A |
| Protection class | Protection class 2 |
| Pollution degree | 3 |
| Overvoltage category | II |
| Isolation voltage | Ui = 250V; Uimp = 2.500V |

OPTICAL DATA

| | |
|----------------------|---------------------------------|
| Light source | LED |
| Light colour | Yellow |
| Optical signal image | Blink Permanent TwinLight |
| Blink frequency (Hz) | 1 Hz |

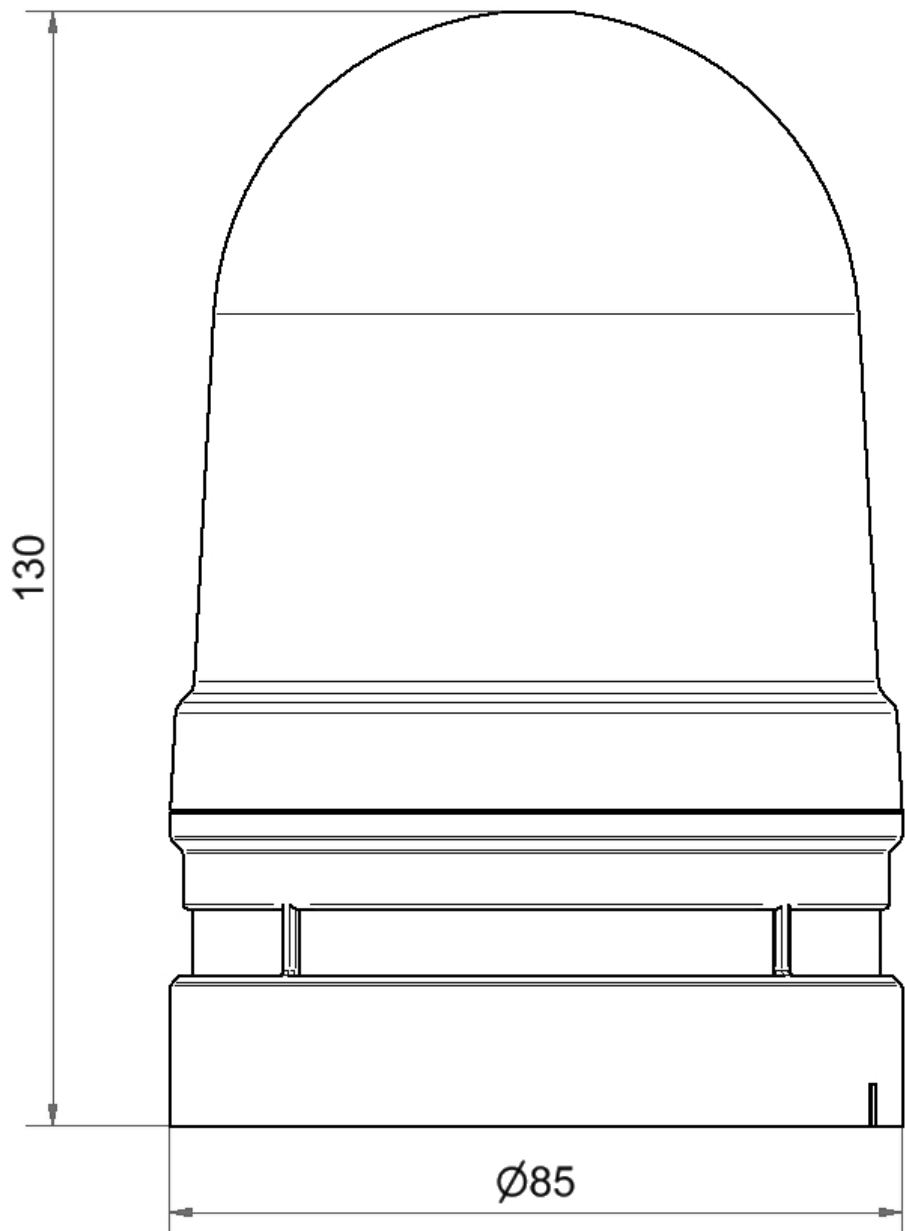


For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

Midi / EvoSIGNAL

Midi TwinLIGHT Combi 115-230VAC YE**ACUSTICAL DATA**

| | |
|-------------------------------|--------------|
| Volume/dB(max) at 1m distance | 110,0 dB (A) |
| Acoustic signal image | Multi-tone |
| Number of tones | 10 tone |
| Audio frequency | 3300 Hz |

DRAWING

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.